


# POTENTIOMETER TRANSMITTER

## SGP

## SGPW

## SGPL

### INSTRUCTION MANUAL

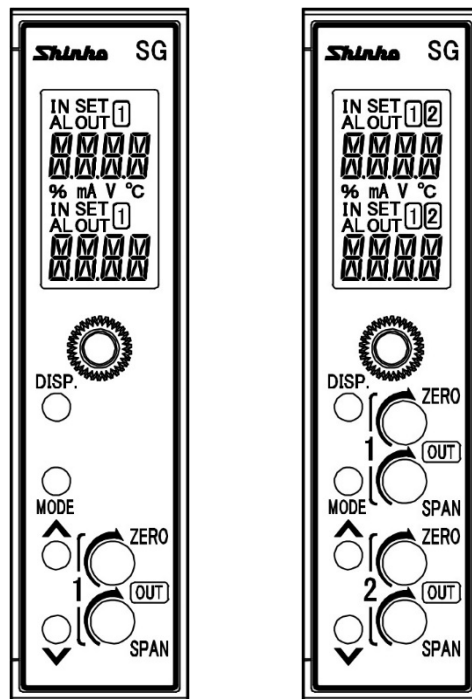

**Shinko**

# Preface


Thank you for purchasing our SGP, SGPW or SGPL, Potentiometer Transmitter. This manual contains instructions for the mounting, functions, operations and notes when operating the SGP, SGPW or SGPL. To prevent accidents arising from the misuse of this instrument, please ensure the operator receives this manual.

## Notes

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause a fire.
- Be sure to follow the warnings, cautions and notices. If they are not observed, serious injury or malfunction may occur.
- The contents of this instruction manual are subject to change without notice.
- Care has been taken to ensure that the contents of this instruction manual are correct, but if there are any doubts, mistakes or questions, please inform our sales department.
- This instrument is designed to be installed on a DIN rail within a control panel. If it is not, measures must be taken to ensure that the operator does not touch power terminals or other high voltage sections.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos Co., Ltd. is not liable for any damage or secondary damage(s) incurred as a result of using this product, including any indirect damage.

### **SAFETY PRECAUTIONS (Be sure to read these precautions before using our products.)**

The safety precautions are classified into categories: "Warning" and "Caution".

Depending on circumstances, procedures indicated by  Caution may result in serious consequences, so be sure to follow the directions for usage.



### **Warning**

Procedures which may lead to dangerous conditions and cause death or serious injury, if not carried out properly.



### **Caution**

Procedures which may lead to dangerous conditions and cause superficial to medium injury or physical damage or may degrade or damage the product, if not carried out properly.



### **Warning**

- To prevent an electrical shock or fire, only Shinko or qualified service personnel may handle the inner assembly.
- To prevent an electrical shock, fire, or damage to instrument, parts replacement may only be undertaken by Shinko or qualified service personnel.



### **Safety Precautions**

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after purpose-of-use consultation with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protective equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Proper periodic maintenance is also required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.



### **Caution with Respect to Export Trade Control Ordinance**

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.

## ■ Installation Precautions



### Caution

This instrument is intended to be used under the following environmental conditions (IEC61010-1): Overvoltage category II, Pollution degree 2

Ensure the mounting location corresponds to the following conditions:

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- No mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of -10 to 55°C (14 to 131°F) that does not change rapidly, and no icing
- An ambient non-condensing humidity of 35 to 85 %RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil or chemicals or the vapors of these substances can come into direct contact with the unit.
- When installing this unit within a control panel, please note that ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 55°C (131°F). Otherwise the life of electronic components (especially electrolytic capacitor) may be shortened.

**Note:** Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.

## ■ Wiring Precautions



### Caution

- Do not leave bits of wire in the instrument, because they could cause a fire and malfunction.
- When wiring, use a crimping pliers and a solderless terminal with an insulation sleeve in which an M3 screw fits.
- Tighten the terminal screw using the specified torque. If excessive force is applied to the screw when tightening, the screw or case may be damaged.
- This instrument does not have a built-in power switch, circuit breaker and fuse. It is necessary to install a power switch, circuit breaker and fuse near the instrument. (Recommended fuse: Time-lag fuse, rated voltage 250 V AC, rated current 2 A)
- For wiring of the AC power source, be sure to use terminals as described in this manual. If the AC power source is connected to incorrect terminals, the unit will be burnt out.
- Do not apply a commercial power source to the sensor which is connected to the input terminal nor allow the power source to come into contact with the sensor.
- When using DC voltage and current input, do not confuse polarity when wiring.
- Keep the input/output wires and power line separate.

## ■ Operation and Maintenance Precautions



### Caution

- Do not touch live terminals. This may cause an electrical shock or problems in operation.
- Turn the power supply to the instrument OFF when retightening the terminal or cleaning. Working on or touching the terminal with the power switched ON may result in severe injury or death due to electrical shock.
- Use a soft, dry cloth when cleaning the instrument.  
(Alcohol based substances may tarnish or deface the unit.)
- As the display section is vulnerable, be careful not to put pressure on, scratch or strike it with a hard object.

## Characters used in this manual [X : No character is indicated (unlit).]

Indication	1	0	1	2	3	4	5	6	7	8	9	C	F
Number, °C/°F	-1	0	1	2	3	4	5	6	7	8	9	°C	°F
Indication	A	b	C	d	E	F	G	H	I	J	K	L	M
Alphabet	A	B	C	D	E	F	G	H	I	J	K	L	M
Indication	N	o	P	Q	R	S	T	U	V	W	X	Y	Z
Alphabet	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

# Contents


	Page
<b>1. Model</b> .....	5
1.1 Model .....	5
1.2 How to Read the Model Label .....	6
<b>2. Name and Functions</b> .....	7
2.1 Front Panel .....	7
2.2 Display Section .....	8
<b>3. Mounting</b> .....	9
3.1 External Dimensions (Scale: mm) .....	9
3.2 Mounting to, and Removal from the DIN Rail .....	10
<b>4. Wiring</b> .....	11
4.1 Lead Wire Solderless Terminal .....	11
4.2 Circuit Configuration .....	11
4.3 Terminal Arrangement .....	13
4.4 Wiring .....	14
<b>5. Display Mode</b> .....	15
<b>6. Setting Mode</b> .....	17
6.1 Display Transition in Setting Mode .....	17
6.2 Input Setting Mode .....	19
6.3 Output 1 Setting Mode .....	20
6.4 Output 2 Setting Mode .....	22
6.5 Instrument Setting Mode .....	24
6.6 Communication Setting Mode .....	26
6.7 Custom Display Setting Mode .....	28
6.8 Potentiometer Adjustment Mode .....	29
6.9 Manual Mode .....	29
<b>7. Adjustment</b> .....	30
7.1 Basic Operation of Adjustment .....	30
7.2 Adjustment .....	30
7.2.1 Output 1 Adjustment .....	30
7.2.2 Output 2 Adjustment .....	30
<b>8. Operation</b> .....	31
8.1 Indication after Power-on .....	31
8.2 Operation .....	31
8.2.1 Input Indication Range .....	31
8.2.2 Indication Range of Output 1 and Output 2 .....	31
8.2.3 Input Disconnection .....	31
8.2.4 Indication Time Setting .....	31
<b>9. Specifications</b> .....	32
<b>10. Troubleshooting</b> .....	35
10.1 Indication .....	35
10.2 Key Operation .....	35
10.3 Operation .....	35
<b>11. Character Table</b> .....	36

# 1. Model

## 1.1 Model


### SGP

S G P - □ - □ - □ - □

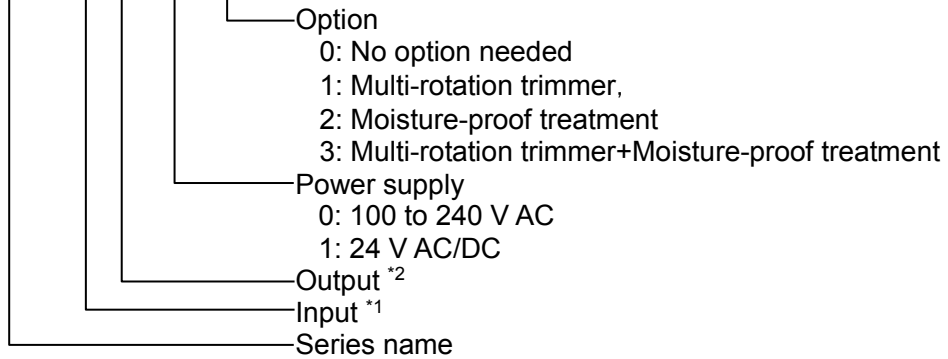


### SGPW

S G P W - □ - □ - □ - 0 - □

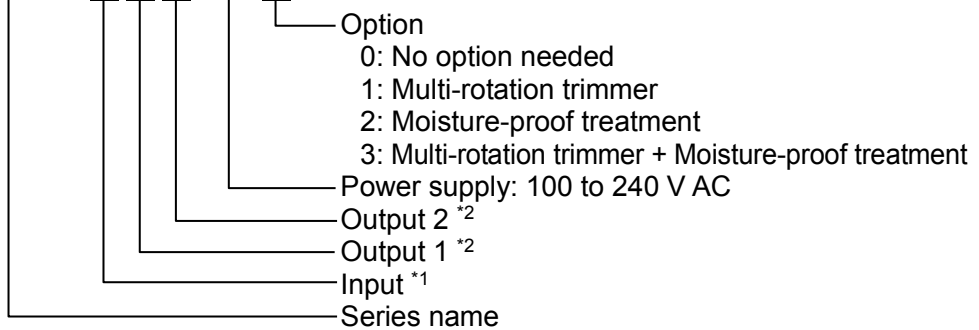

### SGPL

S G P L - □ - □ - 0 - □

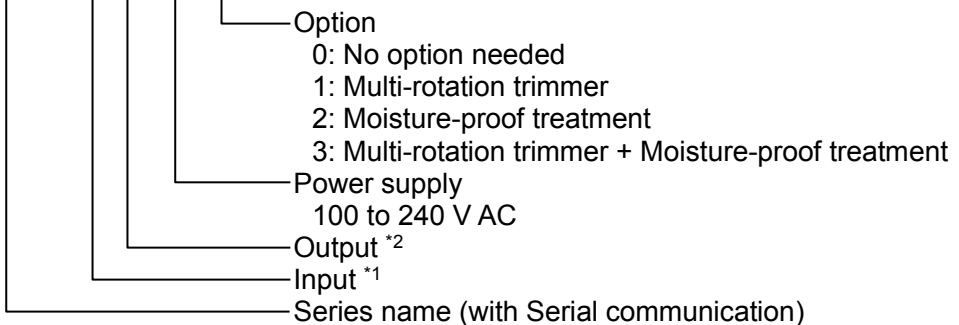

**\*1: Input**

Total resistance: 100 Ω to 10 kΩ  
 Excitation: 0.5 V DC  
 Minimum span: 50% of total resistance


**\*2: Output, Output 1, Output 2**

Code	Output Type	Code	Output Type
1	Current output	A	Voltage output
2		B	
3		C	
4		D	
5		E	
	F		
	G		
			0 to 10 mV
			0 to 100
			0 to 1 V
			0 to 5 V
			1 to 5 V
			0 to 10 V
			-5 to 5 V *

\* Not available for the SGPW.

**1.2 How to Read the Model Label**


The model label is attached to the left side of the case.

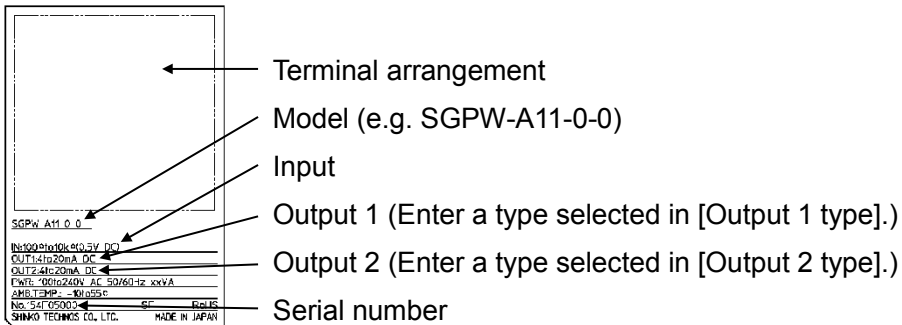

(Fig. 1.2-1)

## 2. Name and Functions

### 2.1 Front Panel

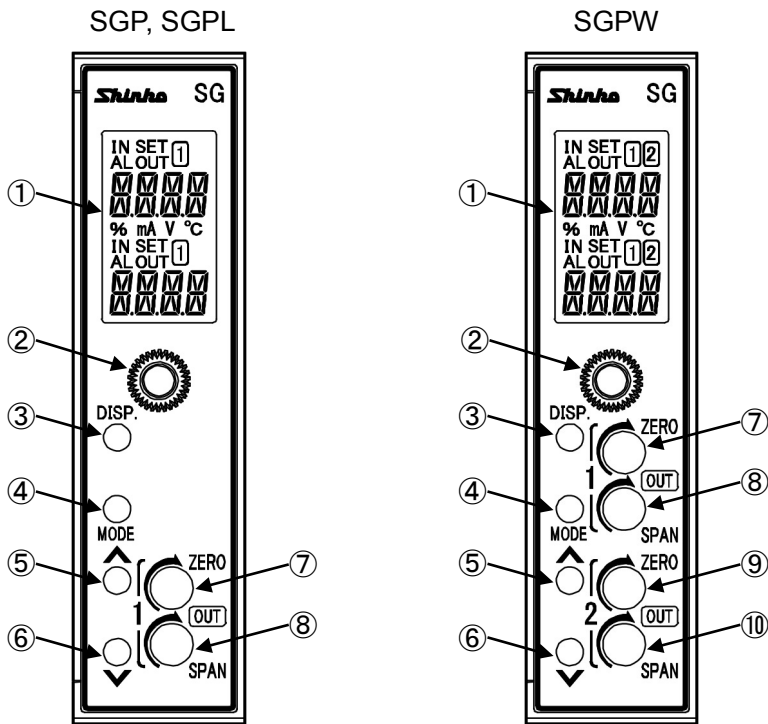


(Fig. 2.1-1)

①	<b>Display section</b>	Indicates setting contents, input value, output value, etc.
②	<b>Mounting screw</b>	Used for fixing the instrument to the socket or removal from it.
③	<b>DISP key</b>	Switches the displays, and moves to the next setting item. In Manual mode, Output 1 and Output 2 setting can be switched. Releases the lock status of the DISP key by pressing for 3 seconds.
④	<b>MODE key</b>	Selects either a setting mode or a display mode. Shifts the digit for the Custom Display. Enters the setting mode by pressing and holding for 5 seconds.
⑤	<b>UP key</b>	Increases the numerical value. Contents of Multi-Display A and B can be changed alternately when Default Display is RUN display mode 1, 2*, 3, 4*, 5 and 6*.
⑥	<b>DOWN key</b>	Decreases the numerical value. Enters Manual mode by pressing for 3 seconds.
⑦	<b>Output 1 Zero</b>	Adjusts the value of Output 1 Zero.
⑧	<b>Output 1 Span</b>	Adjusts the value of Output 1 Span.
⑨	<b>Output 2 Zero *</b>	Adjusts the value of Output 2 Zero.
⑩	<b>Output 2 Span *</b>	Adjusts the value of Output 2 Span.

\* For SGPW only

## 2.2 Display Section

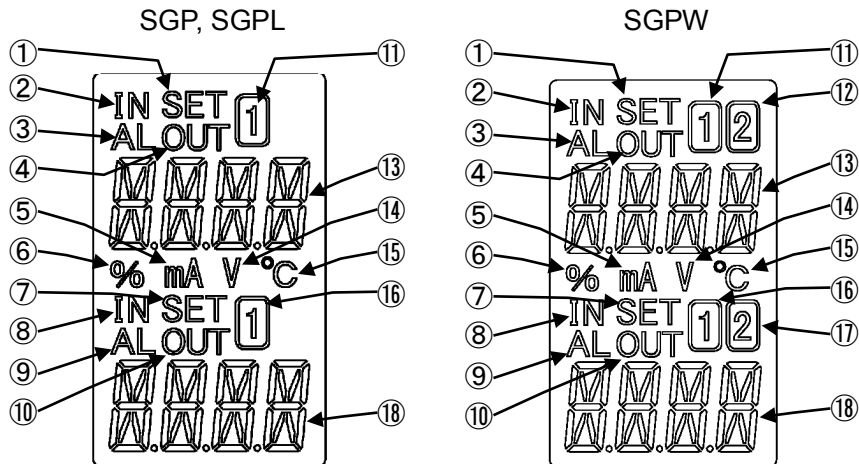

(Fig. 2.2-1)

①	<b>Setting display indicator A</b>	Lights up in Manual mode.
②	<b>Input indicator A</b>	Lights up when Multi-Display A indicates an input value.
③	<b>Alarm indicator A</b>	Lights up if an input error or input disconnection occurs while Multi-Display A indicates an input value.
④	<b>Output indicator A</b>	Lights up when Multi-Display A indicates an output value.
⑤	<b>mA indicator</b>	Lights up when mA is selected in [Indication unit].
⑥	<b>% indicator</b>	Lights up when % is selected in [Indication unit].
⑦	<b>Setting display indicator B</b>	Lights up for the setting display. For the SGPW, lights up for the setting display or in Manual mode.
⑧	<b>Input indicator B</b>	Lights up when Multi-Display B indicates an input value.
⑨	<b>Alarm indicator B</b>	Lights up if an input error or input disconnection occurs while Multi-Display B indicates an input value.
⑩	<b>Output indicator B</b>	Lights up when Multi-Display B indicates an output value.
⑪	<b>1 indicator A</b>	Lights up when Multi-Display A indicates an input value, Output 1 value, Input setting display or Output 1 setting display. Is turned OFF when Multi-Display A indicates custom characters.
⑫	<b>2 indicator A</b>	Lights up when Multi-Display A indicates Output 2 value or Output 2 setting display. Is turned OFF when Multi-Display A indicates custom characters.
⑬	<b>Multi-Display A</b>	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting item
⑭	<b>V indicator</b>	Lights up when V is selected in [Indication unit].
⑮	<b>°C indicator</b>	Lights up when °C is selected in [Indication unit].
⑯	<b>1 indicator B</b>	Lights up when Multi-Display B indicates an input value, Output 1 value, Input setting display or Output 1 setting display. Is turned OFF when Multi-Display B indicates custom characters.
⑰	<b>2 indicator B</b>	Lights up when Multi-Display B indicates Output 2 value or Output 2 setting display. Is turned OFF when Multi-Display B indicates custom characters.




⑱	<b>Multi-Display B:</b>	Indicates the following in accordance with the display indication: Input value, output value, custom characters, setting value
---	-------------------------	---

**Output indicators A and B, Alarm indicators A and B: Red**  
**Other indicators: White**

### 3. Mounting

#### 3.1 External Dimensions (Scale: mm)

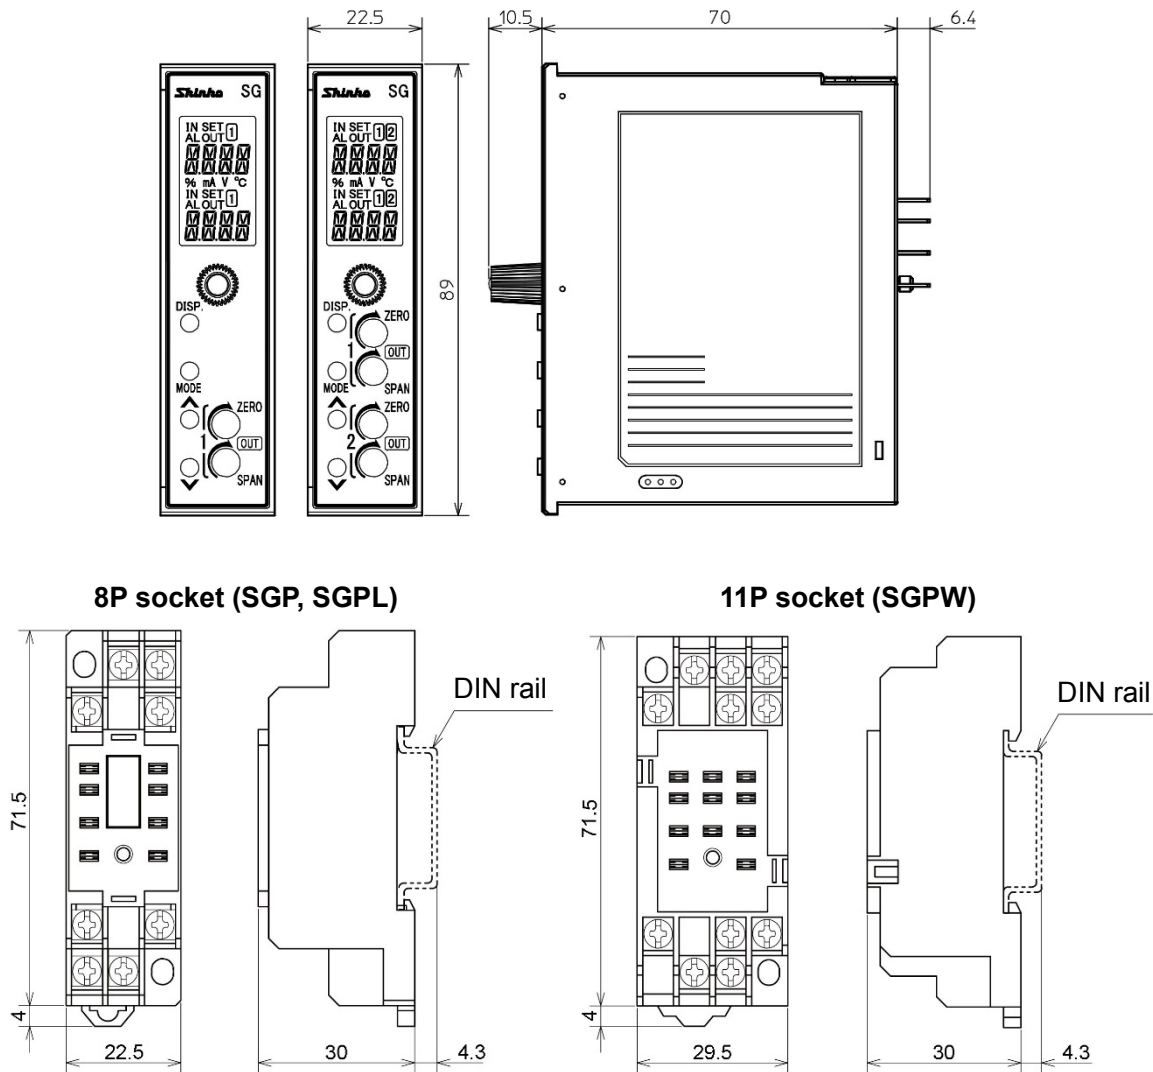

(Fig. 3.1-1)

## 3.2 Mounting to, and Removal from the DIN Rail



### Caution

- Mount the DIN rail horizontally.
- To remove the socket, a flat blade screwdriver is required.  
Never turn the screwdriver when inserting it into the Lock lever. If excessive power is applied to the lever, it may break.
- If the instrument is mounted in a position susceptible to vibration or shock, mount commercially available fastening plates at both ends of the instrument.

#### Recommended Fastening Plate

Manufacturer	Model
Omron Corporation	End plate PFP-M
IDEC Corporation	Fastening plate BNL6
Panasonic Electric Works Co., Ltd.	Fastening plate ATA4806

#### Mounting to the DIN rail (Fig. 3.2-1)

- ① Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ② Make sure the lock lever of the socket is located in the lower part of the socket. Hook the upper side of the socket onto the DIN rail, then fit the lower part of the socket onto the DIN rail (A clicking sound should be heard when done properly.).




### Caution

- Before inserting the instrument to the socket, make sure the cable is wired properly. (Refer to “4. Wiring”.)
- When inserting or removing the socket, make sure the socket is oriented vertically. If force is applied in any other direction than vertically, a malfunction may occur.
- If the mounting screw is fastened too tightly, a malfunction may occur.


- ③ Insert the SGP into the socket.
- ④ Fasten the mounting screw by turning it clockwise, to secure the SGP onto the socket. Tighten the screw lightly.

#### Removal from the DIN rail (Fig. 3.2-2)

- ① Turn the power to the instrument OFF.
- ② Separate the instrument from the socket by loosening the mounting screw on the front panel.
- ③ Insert a flat blade screwdriver into the Lock lever (lower part of the socket), and remove the socket from the DIN rail while pulling the lever down.

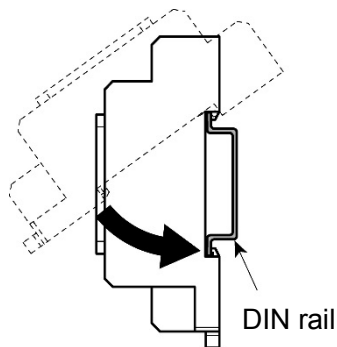

(Fig. 3.2-1)

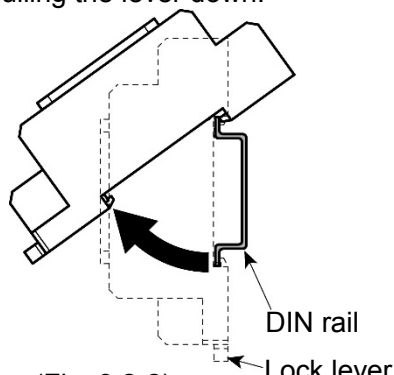

(Fig. 3.2-2)

# 4. Wiring



## Warning


Turn the power supply to the instrument off before wiring or checking. Working on or touching the terminal with the power switched on may result in severe injury or death due to electrical shock.

### 4.1 Lead Wire Solderless Terminal

Use a solderless terminal with an insulation sleeve in which an M3 screw fits as shown below. The torque should be 0.63 N•m.


Solderless Terminal	Manufacturer	Model
Y-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25Y-3
	Japan Solderless Terminal MFG Co., Ltd.	VD1.25-B3A
Ring-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25-3
	Japan Solderless Terminal MFG Co., Ltd.	V1.25-3

Y-type(Scale: mm)

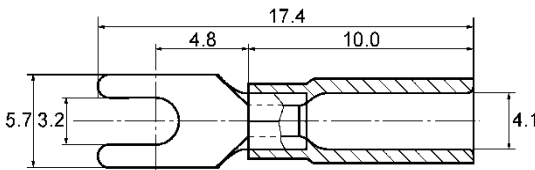

(Fig. 4.1-1)


Ring-type(Scale: mm)

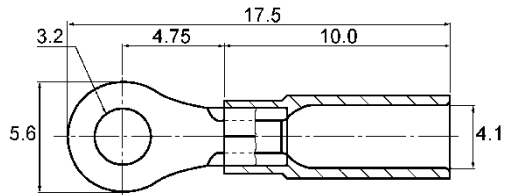

(Fig. 4.1-2)


### 4.2 Circuit Configuration

#### SGP, SGPL

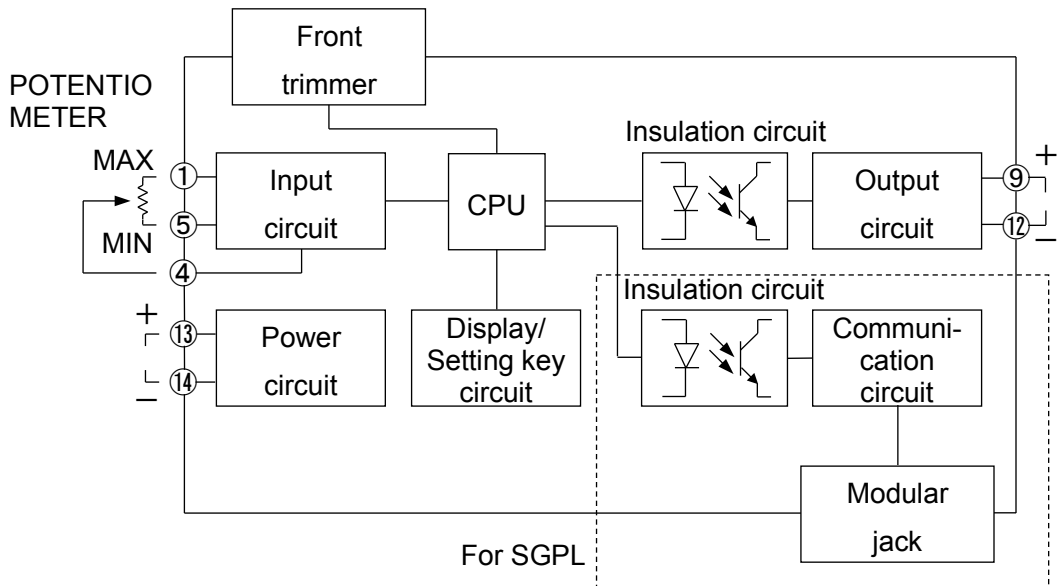


(Fig. 4.2-1)

# SGPW

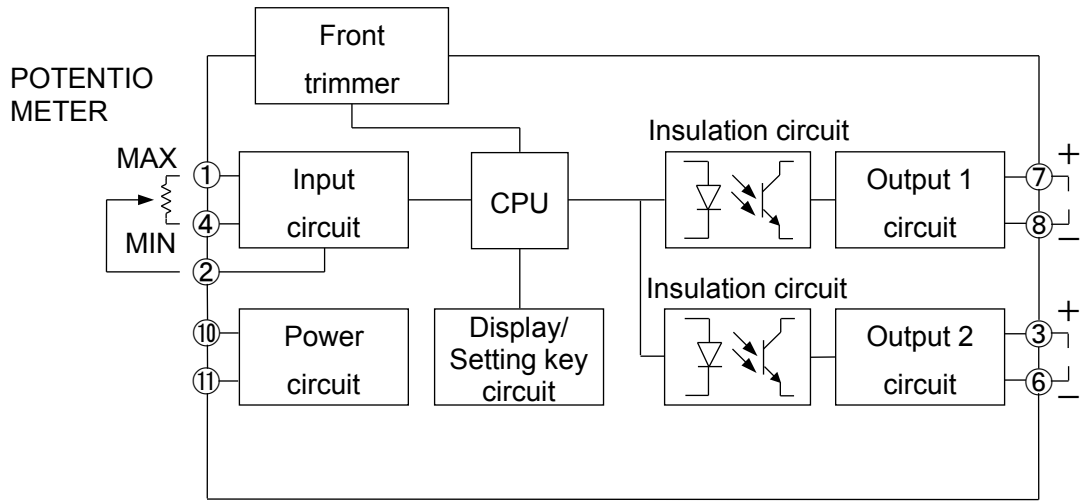


(Fig. 4.2-2)

### 4.3 Terminal Arrangement SGP

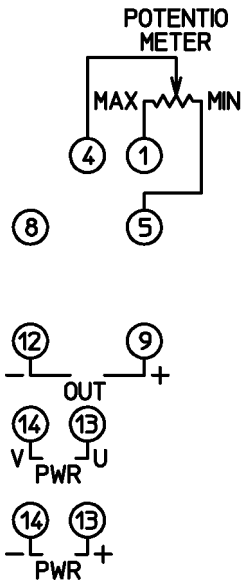


(Fig. 4.3-1)

### SGPL

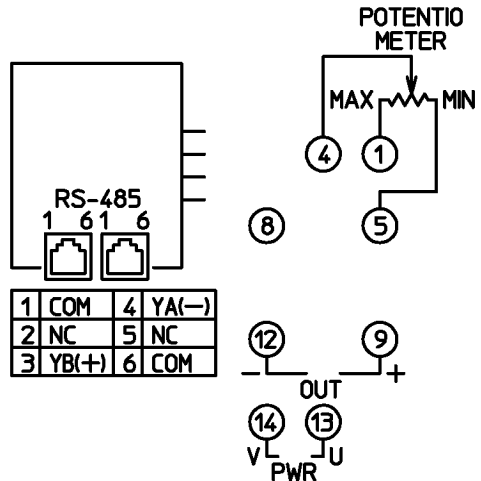

(Fig. 4.3-2)

### SGPW

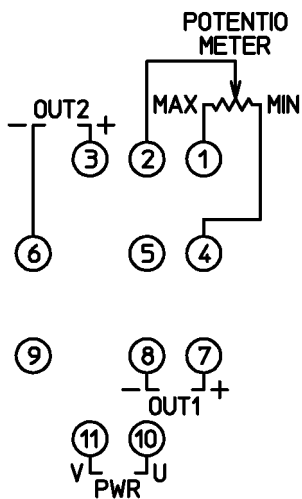

(Fig. 4.3-3)

PWR	Power supply 100 to 240 V AC or 24 V AC/DC (for SGP)
OUT (OUT1)	Output or Output 1 (for SGPW)
OUT2	Output 2 (for SGPW)
POTENTIOMETER	Potentiometer input
RS-485	Serial communication (for SGPL)

## 4.4 Wiring



# Warning

- For 100 to 240 V AC, if the AC power source is connected to incorrect terminals, the instrument will be burnt out.

### (1) Power Source Wiring

SGP: Use terminals ⑬, ⑭ for the power supply to the instrument.  
For 24 V DC, use terminals ⑬(+), ⑭(-) for the power supply to the instrument.

SGPL: Use terminals ⑬, ⑭ for the power supply to the instrument.

SGPW: Use terminals ⑩, ⑪ for the power supply to the instrument.

### (2) Output Wiring

SGP, SGPL: Use terminals ⑨(+), ⑫(-) for the output wiring.

SGPW: Output 1: Use terminals ⑦(+), ⑧(-) for Output 1 wiring.

Output 2: Use terminals ③(+), ⑥(-) for Output 2 wiring.


### (3) Input Wiring

SGP, SGPL: Use terminals ①, ④, ⑤ for the input wiring.

SGPW: Use terminals ①, ②, ④ for the input wiring.


### (4) Communication Wiring

For the SGPL, connect the SGPL to SGPL using the provided cable.

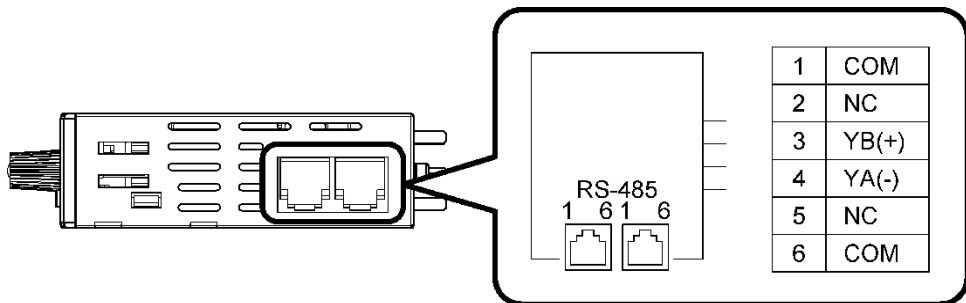

(Fig. 4.4-1)

# 5. Display Mode

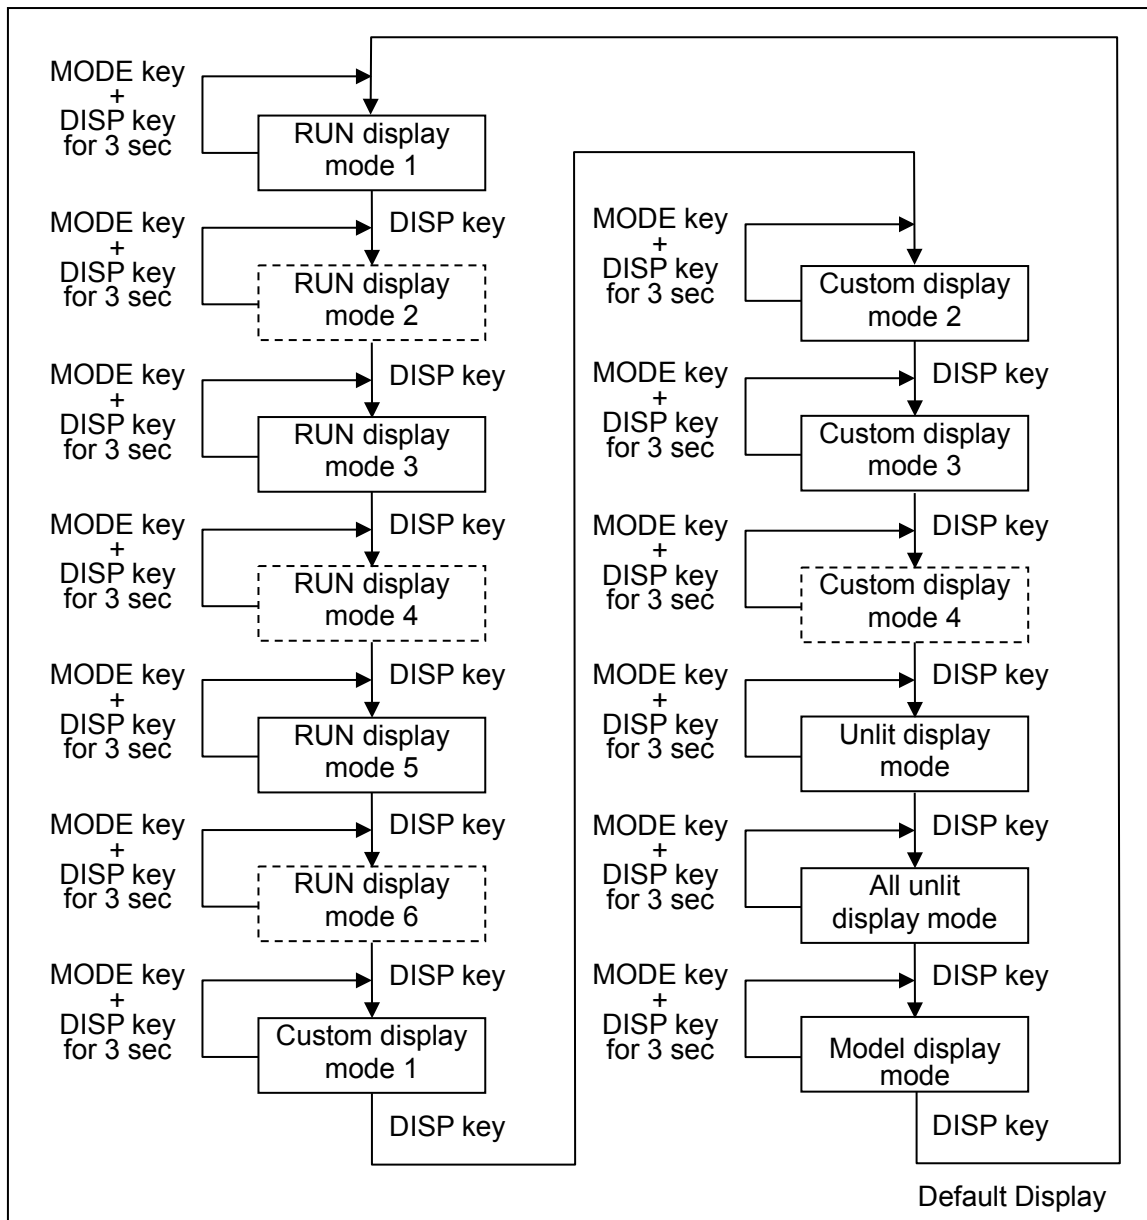

• [dashed box] : Available only for the SGPW.

## Default Display:

If the MODE and DISP keys (in that order) are pressed together for approx. 3 seconds in any display mode, the display mode will become the Default Display.

Once the Default Display is set, the DISP key will be in lock status. If the DISP key is pressed for approx. 3 seconds on the Default Display, the key lock status will be cancelled.

If the DISP key is pressed while the DISP key is in lock status, Multi-Display A indicates **MBLK**.


- RUN display mode 1:** Multi-Display A indicates the input value, and Multi-Display B indicates Output 1 value.
- RUN display mode 2:** Multi-Display A indicates the input value, and Multi-Display B indicates Output 2 value.
- RUN display mode 3:** Multi-Display A indicates the input value, and Multi-Display B is unlit.
- RUN display mode 4:** Multi-Display A indicates Output 1 value, and Multi-Display B indicates Output 2 value.
- RUN display mode 5:** Multi-Display A is unlit, and Multi-Display B indicates Output 1 value.
- RUN display mode 6:** Multi-Display A is unlit, and Multi-Display B indicates Output 2 value.
- Custom display mode 1:** Multi-Display A indicates characters set in [Multi-Display A]. Multi-Display B indicates characters set in [Multi-Display B].
- Custom display mode 2:** Multi-Display A indicates the input value, and Multi-Display B indicates characters set in [Multi-Display B].
- Custom display mode 3:** Multi-Display A indicates Output 1 value, and Multi-Display B indicates characters set in [Multi-Display B].
- Custom display mode 4:** Multi-Display A indicates Output 2 value, and Multi-Display B indicates characters set in [Multi-Display B].
- Unlit display mode:** Multi-Display A and B are unlit, and the Input indicator A lights up.  
Alarm indicator A and B light up if they are under the conditions of lighting.
- All unlit display mode:** All displays and indicators are unlit.  
Alarm indicator A and B do not light up even if they are under the conditions of lighting.
- Model display mode:** Multi-Display A indicates a model name, and Multi-Display B indicates an input code and output code.




# 6. Setting Mode

## 6.1 Display Transition in Setting Mode

- : Available only for the SGPW.
- : Available only for the SGPL.
- If the MODE key is pressed and held down for approx. 5 seconds in each setting mode, the unit will move to the Default Display.

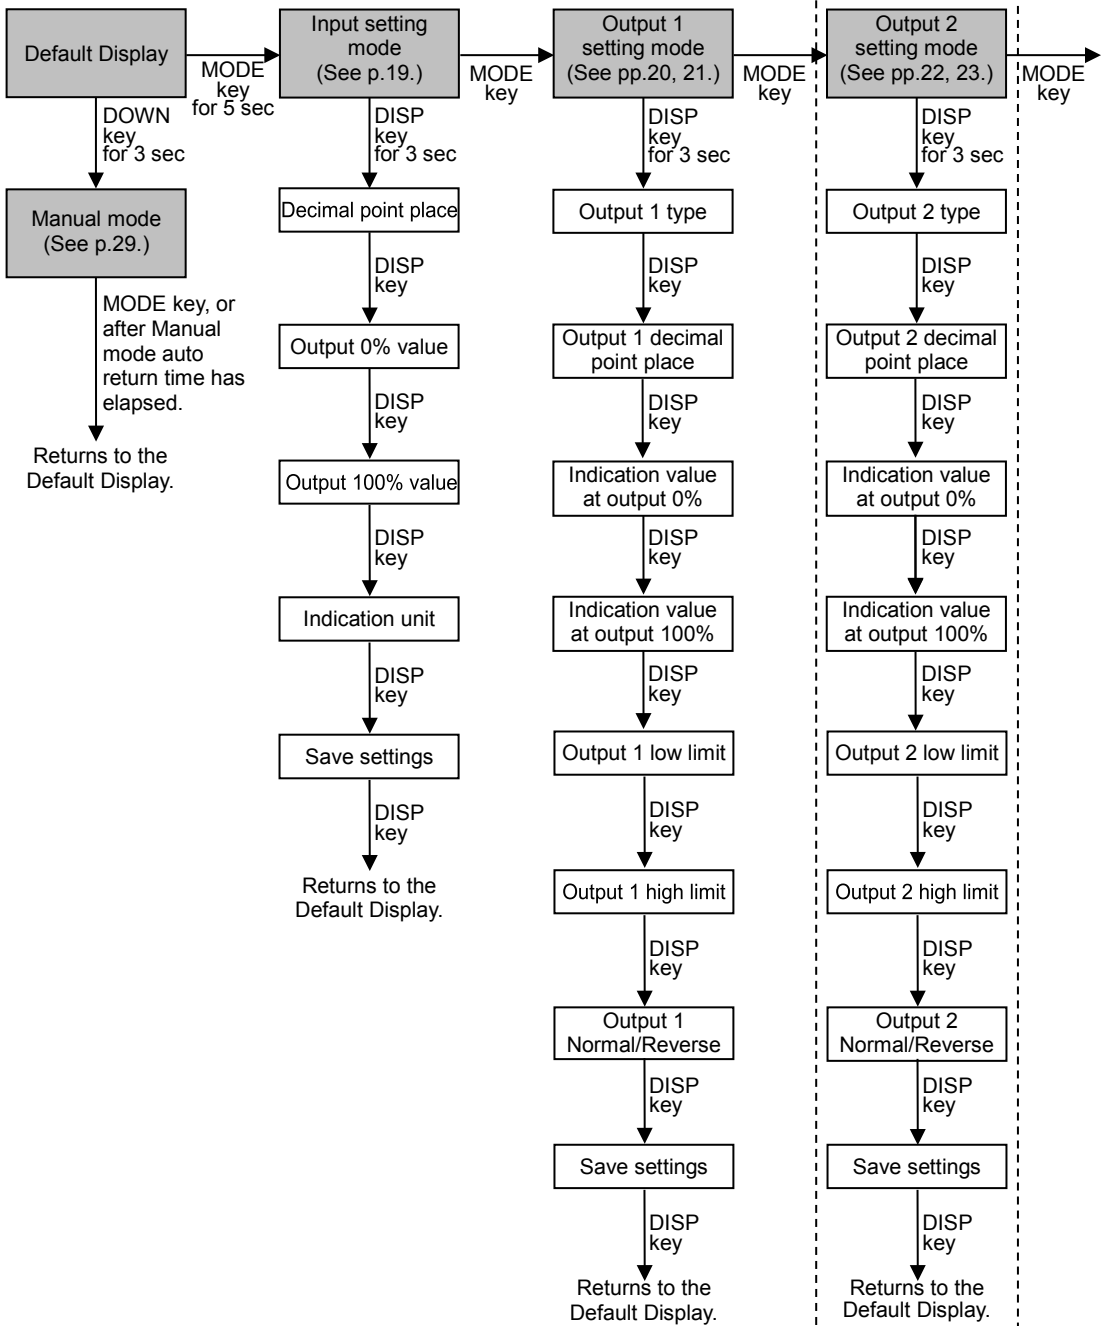

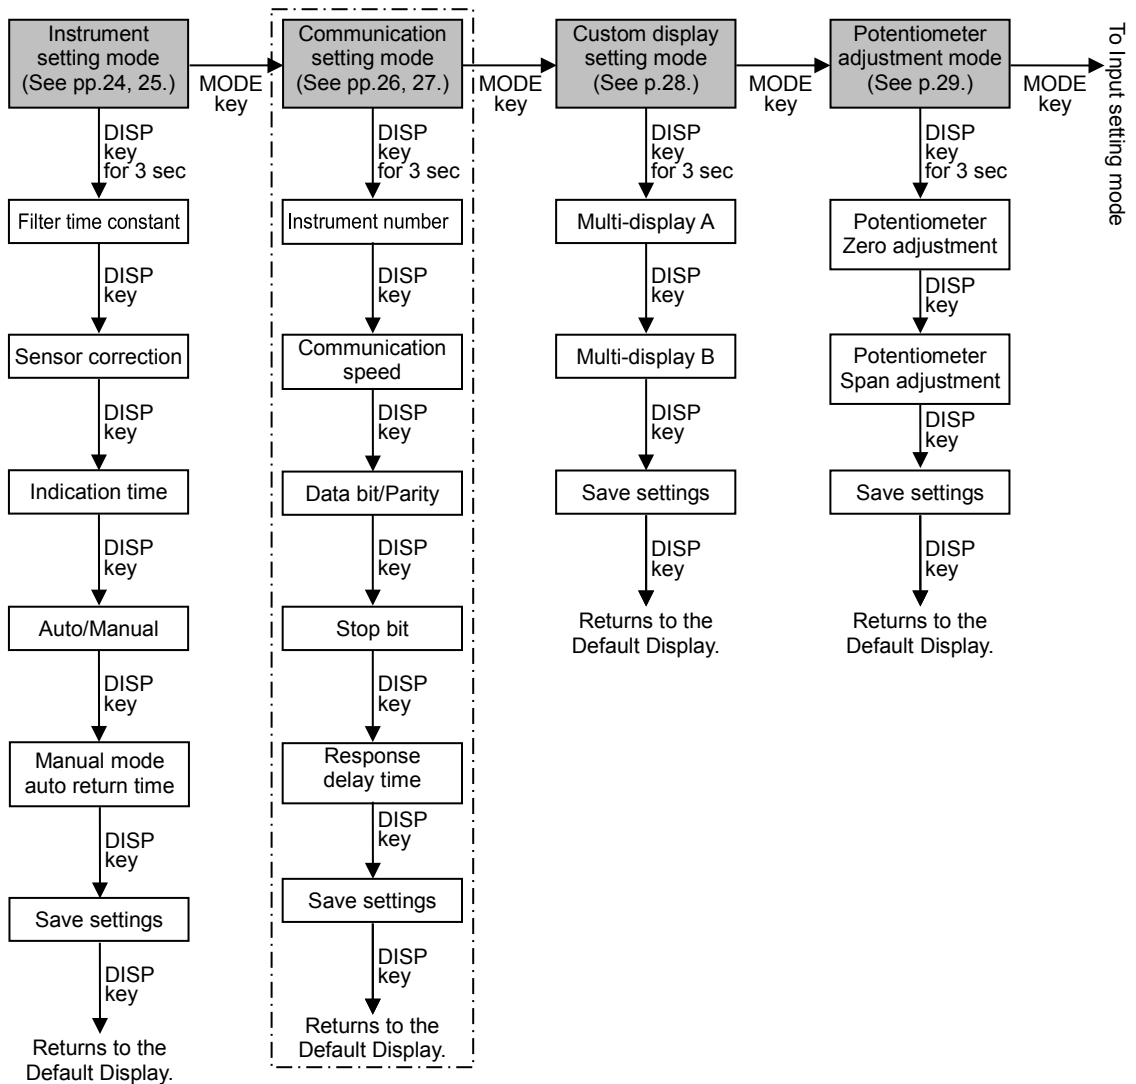

## 6.2 Input Setting Mode

### Decimal Point Place

For DC input, selects a decimal point place.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point			1 digit after decimal point
1 digit after decimal point			
2 digits after decimal point			
3 digits after decimal point			

### Output 0% Value

Sets an input value (indicated on the display) at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to Output 100% value		Set value	0.0 

### Output 100% Value

Sets an input value (indicated on the display) at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 0% value to 9999		Set value	100.0 

### Indication Unit

Selects the unit for indication.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No unit			No unit
%			
mA			
V			
°C			

### Save Settings
















Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			Save
Not save			

### 6.3 Output 1 Setting Mode

#### Output 1 Type








Selects an output type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA			4 to 20 mA  
0 to 20 mA			
0 to 16 mA			
2 to 10 mA			
0 to 10 mA			
0 to 10 mV			
0 to 100 mV			
0 to 1 V			
0 to 5 V			
1 to 5 V			
0 to 10 V			
-5 to 5 V *			

\* Not available for the SGPW.




#### Output 1 Decimal Point Place

Selects a decimal point place for Output 1.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point			2 digits after decimal point  
1 digit after decimal point			
2 digits after decimal point			
3 digits after decimal point			




#### Indication Value at Output 0%

Sets an indication value at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999		Set value	4.00  

#### Indication Value at Output 100%

Sets an indication value at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999		Set value	20.00  

### Output 1 Low Limit

Sets Output 1 low limit value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-10.0 to Output 1 high limit	LOW	Set value	-10.0% LOW 100

### Output 1 High Limit

Sets Output 1 high limit value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 1 low limit to 110.0	HIGH	Set value	110.0% HIGH 100

### Output 1 Normal/Reverse

Selects either Normal mode or Reverse mode for Output 1 status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal	NORM	NORM	Normal NORM NORM
Reverse		REVS	

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

## 6.4 Output 2 Setting Mode

Available only for the SGPW.

### Output 2 Type

Selects an output type.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
4 to 20 mA	0000	4000	4 to 20 mA 0000 4000
0 to 20 mA		0000	
0 to 16 mA		0000	
2 to 10 mA		2000	
0 to 10 mA		0000	
0 to 10 mV		0000	
0 to 100 mV		0000	
0 to 1 V		0000	
0 to 5 V		0000	
1 to 5 V		0000	
0 to 10 V		0000	

### Output 2 Decimal Point Place

Selects a decimal point place for Output 2.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
No decimal point	0000	0000	No decimal point 0000 0000
1 digit after decimal point		0000	
2 digits after decimal point		0000	
3 digits after decimal point		0000	

### Indication Value at Output 0%

Sets an indication value at the time of output 0%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999	0000	Set value	4.00 0000 4000

### Indication Value at Output 100%

Sets an indication value at the time of output 100%.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1999 to 9999	0000	Set value	20.00 0000 2000

### Output 2 Low Limit

Sets Output 2 low limit value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-10.0 to Output 2 high limit	ALL2	Set value	-10.0% ALL2 H100

### Output 2 High Limit

Sets Output 2 high limit value.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Output 2 low limit to 110.0	ALL2	Set value	110.0% ALL2 H100

### Output 2 Normal/Reverse

Selects either Normal mode or Reverse mode for Output 2 status.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Normal	ALL2	NBML	Normal ALL2 NBML
Reverse		REKS	

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YESM	Save SAVE YESM
Not save		NOXM	

## 6.5 Instrument Setting Mode

### Filter Time Constant

Sets the input filter time constant.

Input fluctuation due to noise can be decreased.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0.0 to 10.0 seconds	TIME	Set value	0.0 sec TIME 00

### Sensor Correction

Sets sensor correction value.

Input value = Current input value + (Sensor correction value)

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
-1000 to 1000 *	0000	Set value	0 0000 00

\* The placement of the decimal point follows the selection.

### Indication Time

Sets duration from no operation until indication (of Multi-Display A, Multi-Display B, and each action indicator) turns off.

When set to 00.00, they remain lit.

After indication time has elapsed, and if any key is pressed while they are unlit, they will light up again.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
00 : 00 to 60 : 00 (Minutes : Seconds) 00 : 00..... Continuous 00: 01 to 60 : 00 ... Indication time	TIME	Set value	30 : 00 (Minutes : Seconds) TIME 0000

### Auto/Manual

If AUTO is selected, the output value corresponding to the input value will be output.

When MANUAL is selected, the unit can enter Manual mode. The output value set in Manual mode will be output.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Auto	MARS	TIME	Manual MARS MANU
Manual		MANU	



### Manual Mode Auto Return Time

Sets duration from manual mode until the unit automatically returns to the Default Display.

If set to 0 (zero), auto return will not occur.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 60 minutes	MORE	Set value	30 minutes MORE 00

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

## 6.6 Communication Setting Mode

Available only for the communication specifications.

### Instrument Number

Sets an instrument number.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
1 to 247		Set value	1 

### Communication Speed

Selects the communication speed.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
9600 bps			38400 bps 
19200 bps			
38400 bps			

### Data bit/Parity

Selects data bit and parity.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
8 bits/No parity			8 bits/Odd 
8 bits/Even			
8 bits/Odd			

### Stop Bit

Selects the stop bit.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
1 bit			1 bit 
2 bits			

### Response Delay Time

Response from the instrument can be delayed after receiving command from the host computer.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
0 to 1000 ms		Set value	10 ms 

## Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save	SAVE	YES	Save SAVE YES
Not save		NO	

## 6.7 Custom Display Setting Mode

Customizes characters to be indicated on the Multi-Display A and B\*.

Use alphanumeric characters and symbols.

(e.g.) FLOW, TEMP, No.1, No.2

\* Number of characters which can be indicated differs depending on the display mode.

Refer to Section '5. Display Mode' (pp.15, 16).



- If Custom display mode 1 is selected:  
Up to 8 characters can be displayed in total for both Multi-Display A and B.
- If any of Custom display mode 2 to 4 is selected:  
Up to 4 characters can be displayed on the Multi-Display B.

Can be set from the thousands digit of the display.

Digits can be selected with the MODE key.



### Multi-Display A

Characters for the Multi-Display A can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, -, ., (Blank)		Set value	





### Multi-Display B

Characters for the Multi-Display B can be customized.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
A to Z, 0 to 9, /, -, ., (Blank)		Set value	

### Save Settings

Selects whether the settings are saved (registered) or not.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Save			
Not save			




## 6.8 Potentiometer Adjustment Mode

### Potentiometer Zero Adjustment

Performs potentiometer input Zero adjustment.

After installing the potentiometer, press the DOWN key for 2 seconds.

Automatic adjustment will be performed.




Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Automatic adjustment with the DOWN key		Set value	0.0  

### Potentiometer Span Adjustment

Performs potentiometer input Span adjustment.

Set the potentiometer to the MAX (Maximum) side, and press the UP key for 2 seconds.

Automatic adjustment will be performed.

Setting Range	Indication		Factory Default
	Multi-Display A	Multi-Display B	
Automatic adjustment with the UP key		Set value	100.0  

## 6.9 Manual Mode

If MANUAL is selected in [Auto/Manual] in Instrument setting mode, press the DOWN key for 3 seconds on the Default Display. Then the unit will enter Manual mode.

At this time, Multi-Display A indicates Output 1 value, and Multi-Display B indicates Output 2 value.

The output value can be set by the UP or DOWN key. The output value is lit while setting.

Pressing the DISP key switches the output to be set. The output to be set flashes.

By pressing the MODE key in Manual mode, or after Manual mode auto return time has elapsed, the unit returns to the Default Display, and outputs the output value corresponding to the input value.

# 7. Adjustment

Performs the output zero and span adjustments.

For this instrument, the output adjustment has already been completed when shipped.

If the instrument is used with the ordered Input/Output spec, the adjustment is not required.

However, for calibration, or for the fine adjustment of the SGP to which any equipment is connected, perform the adjustment.

Connect an mV generator or Dial resistor to the input terminals of this instrument.

Connect a digital multimeter to the output terminals.

## 7.1 Basic Operation of Adjustment

Use the following trimmers on the front panel for adjustment.

Output 1 Zero: Adjusts the value of Output 1 Zero.

Output 1 Span: Adjusts the value of Output 1 Span.

Output 2 Zero: Adjusts the value of Output 2 Zero. (for SGPW only)

Output 2 Span: Adjusts the value of Output 2 Span. (for SGPW only)

## 7.2 Adjustment

All adjustment items are shown below.

Perform adjustment as follows.

### 7.2.1 Output 1 Adjustment

The following outlines the procedure for Output 1 adjustment.

- ① Enter the value corresponding to output 0%, and adjust the value using the 'Output 1 Zero' trimmer while viewing the output value (on the digital multimeter).
- ② Enter the value corresponding to output 100%, and adjust the value using the 'Output 1 Span' trimmer while viewing the output value (on the digital multimeter).
- ③ Enter the value corresponding to output 0% again, and confirm the output value (on the digital multimeter).
- ④ If the value corresponding to output 0% is not at 0%, repeat steps ① to ③ again.

### 7.2.2 Output 2 Adjustment

The procedure for Output 2 adjustment is the same as that of Output 1 adjustment.


Use Output 2 Zero and Span trimmers for adjustment

# 8. Operation

## 8.1 Indication after Power-on

After the power is turned on, the instrument is switched to warm-up status for 3 seconds. Multi-Display A indicates the model name, and Multi-Display B indicates the input code and output code.

(e.g.) SGP-A01-0-0

Multi-Display A: 

Multi-Display B: 

A value corresponding to input 0% will be output for Output 1 and Output 2.

## 8.2 Operation

After warm-up indication, the unit enters display mode.


The input signal selected in [Input type] will be converted to the output selected in [Output 1 type] and [Output 2 type].


### 8.2.1 Input Indication Range

The measured value is indicated within the following range:

[Output 0% value – (Output 100% value – Output 0% value) × 10%] to  
[Output 100% value + (Output 100% value – Output 0% value) × 10%]

For a value lower than (and including) -2000, the input value and the minus (-) sign are indicated alternately. For a value higher than (and including) 10000, the lower 4 digits will flash. (The placement of the decimal point follows the selection.)

When the measured value exceeds the indication range:  will flash.

When the measured value drops below the indication range:  will flash.

### 8.2.2 Indication Range of Output 1 and Output 2


The output value is indicated within the following range:


[Indication value at output 0% – (Indication value at output 100% – Indication value at output 0%) × 10%] to  
[Indication value at output 100% + (Indication value at output 100% – Indication value at output 0%) × 10%]

However, the high limit value is 9999, and the low limit value is -1999.

(The placement of the decimal point follows the selection.)

### 8.2.3 Input Disconnection

For overscale, if input is disconnected, the Alarm indicator will light up, and  will flash.

For underscale, if input is disconnected, the Alarm indicator will light up, and  will flash.

### 8.2.4 Indication Time Setting

After preset indication time has elapsed, Multi-Display A, Multi-Display B and each action indicator are turned OFF.

They will light up again if any key is pressed.

They remain lit during setting mode, or in the event of an input error or input disconnection.

If the indication time is set to 00:00, they will remain lit.

# 9. Specifications

## Input Specifications

Total resistance: 100  $\Omega$  to 10 k $\Omega$

Excitation: 0.5 V DC

Minimum span: 50% of total resistance

## Output 1 Specifications

Direct current	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	4 to 20 mA	750 $\Omega$ max.	-5 to 5%	95 to 105%
	0 to 20 mA *	750 $\Omega$ max.		
	0 to 16 mA *	900 $\Omega$ max.		
	2 to 10 mA	1500 $\Omega$ max.		
	0 to 10 mA *	1500 $\Omega$ max.		
* 0 mA or less: Out of base accuracy				
DC voltage	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	0 to 10 mV <sup>*1</sup>	10 k $\Omega$ min.	-5 to 5%	95 to 105%
	0 to 100 mV <sup>*1</sup>	100 k $\Omega$ min.		
	0 to 1 V <sup>*1</sup>	1000 $\Omega$ min.		
	0 to 5 V <sup>*1</sup>	5000 $\Omega$ min.		
	1 to 5 V	5000 $\Omega$ min.		
	0 to 10 V <sup>*1</sup>	10 k $\Omega$ min.		
	-5 to 5 V <sup>*2</sup>	10 k $\Omega$ min.		
*1: 0 V or less: Out of base accuracy *2: Not available for the SGPW.				

## Output 2 Specifications

Direct current	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	4 to 20 mA	750 $\Omega$ max.	-5 to 5%	95 to 105%
	0 to 20 mA *	750 $\Omega$ max.		
	0 to 16 mA *	900 $\Omega$ max.		
	2 to 10 mA	1500 $\Omega$ max.		
	0 to 10 mA *	1500 $\Omega$ max.		
* 0 mA or less: Out of base accuracy				
DC voltage	Output Range	Allowable Load Resistance	Zero Adjustment Range	Span Adjustment Range
	0 to 10 mV *	10 k $\Omega$ min.	-5 to 5%	95 to 105%
	0 to 100 mV *	100 k $\Omega$ min.		
	0 to 1 V *	1000 $\Omega$ min.		
	0 to 5 V *	5000 $\Omega$ min.		
	1 to 5 V	5000 $\Omega$ min.		
	0 to 10 V *	10 k $\Omega$ min.		
* 0 V or less: Out of base accuracy				



## Performance

<b>Base accuracy (at 25°C)</b>	±0.1% of each input span
<b>Temperature coefficient</b>	±0.015 %/°C 0 to 10 mV output: 0.02 %/°C
<b>Response time</b>	500 ms max. (0→90%)
<b>Indication update cycle</b>	125 ms
<b>Insulation resistance</b>	100 MΩ minimum, at 500 V DC
<b>Dielectric strength</b>	2.0 kV AC for 1 minute

## General Structure

<b>Dimensions</b>	22.5 x 89 x 70 mm (W x H x D)
<b>Weight</b>	Approx. 77 g
<b>Mounting method</b>	DIN rail
<b>Case</b>	Flame-resistant resin, Color: Black
<b>Front panel</b>	Polycarbonate

## Installation Specifications

<b>Power supply</b>	100 to 240 V AC 50/60 Hz 24 V AC/DC 50/60 Hz
<b>Allowable voltage range</b>	100 to 240 V AC: 85 to 264 V AC 24 V AC/DC: 20 to 28 V AC/DC
<b>Power consumption</b>	100 to 240 V AC: Approx. 9 VA max. (SGPL: Approx. 10 VA max.) 24 V AC: Approx. 6 VA max. 24 V DC: Approx. 3 W max.
<b>Ambient temperature</b>	-10 to 55°C (Non-condensing, no icing)
<b>Ambient humidity</b>	35 to 85 %RH (Non-condensing)

## Serial Communication (SGPL)



<b>Operation from an external computer</b>	Reading and setting of various set values Reading of the input value and action status Function change.
<b>Communication line</b>	EIA RS-485
<b>Communication method</b>	Half-duplex communication
<b>Communication speed</b>	9600, 19200, 38400 bps (Selectable by keypad) (Factory default: 38400 bps)
<b>Synchronization method</b>	Start-stop synchronization
<b>Communication protocol</b>	Modbus RTU
<b>Start bit</b>	1 bit
<b>Data bit</b>	8 bits
<b>Parity</b>	Even/Odd/No parity (Selectable by keypad) (Factory default: Odd)
<b>Stop bit</b>	1 bit or 2 bits (Selectable by keypad) (Factory default: 1 bit)
<b>Response delay time</b>	Response from the instrument can be delayed after receiving command from the host computer. 0 to 1000 ms (Factory default: 10 ms)

## Standard Function


<b>Power failure countermeasure</b>	The setting data is backed up in the non-volatile IC memory.
<b>Self-diagnosis</b>	The CPU is monitored by a watchdog timer, and if an abnormal status occurs, the instrument is switched to warm-up status, turning all outputs OFF.

# 10. Troubleshooting

## 10.1 Indication

Problem	Possible Cause	Solution
Multi-Display A or B flashes  or  when it indicates an input value.	The sensor may be disconnected.	Replace with a new sensor.
	Check whether the sensor is securely mounted to the input terminals of this instrument.	Connect the sensor terminals to the instrument input terminals securely.
	Check the input signal source.	Ensure that the input signal source works normally.
Multi-Display A or B is irregular or unstable when it indicates an input value.	Sensor correction value is unsuitable.	Set it to a suitable value.
	AC leaks into the sensor circuit.	Use an ungrounded type sensor.
	There may be equipment that interferes with or makes noise near the instrument.	Keep the instrument clear of any potentially disruptive equipment.
Displays and indicators are unlit. If any key is pressed, they will light up.	The Indication Time (p.24) is set to any value other than 00 : 00. (Factory default is 30 : 00.)	To indicate continuously, set the Indication Time (p.24) to "00 : 00".

## 10.2 Key Operation

Problem	Possible Cause	Solution
If the DISP key is pressed, Multi-Display A shows  , and the display mode cannot be switched.	The DISP key is in locked status.	Press the DISP key for approx. 3 seconds to release the key lock.

## 10.3 Operation

Problem	Possible Cause	Solution
When Multi-Display A or B indicates an input value, the input value does not change.	The sensor may be out of order.	Replace with the new sensor.
	Check whether input and output wire are securely connected to the I/O terminals of the instrument.	Ensure that input and output wire are securely connected to the I/O terminals of the instrument.
	Check whether the wiring of input and output are correct.	Wire them correctly.
No output	Selections in [Output 1 type (p.20)], [Output 1 Normal/Reverse (p.21)], [Output 2 type (p.22)] or [Output 2 Normal/Reverse (p.23)] may be incorrect.	Make a correct selection in [Output 1 type (p.20)], [Output 1 Normal/Reverse (p.21)], [Output 2 type (p.22)] or [Output 2 Normal/Reverse (p.23)].

# 11. Character Table

Please use the following factory default values for your reference.

## Display mode

Setting Item	Multi-Display A	Multi-Display B	Data
Default display mode	Follows currently indicated display mode.		
RUN display mode 1	Input value	Output 1 value	
RUN display mode 2 *	Input value	Output 2 value	
RUN display mode 3	Input value	Unlit	
RUN display mode 4 *	Output 1 value	Output 2 value	
RUN display mode 5	Unlit	Output 1 value	
RUN display mode 6 *	Unlit	Output 2 value	
Custom display mode 1	AAAA	AAAA	
Custom display mode 2	Input value	AAAA	
Custom display mode 3	Output 1 value	AAAA	
Custom display mode 4 *	Output 2 value	AAAA	
Model display mode	Model	Input, Output code	

\* Available only for the SGPW.

## Setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Input setting mode	ANNN	Unlit	
Output 1 setting mode	0000	Unlit	
Output 2 setting mode *	0000	Unlit	
Instrument setting mode	ANNN	Unlit	
Communication setting mode	00MM	Unlit	
Custom display setting mode	00SE	Unlit	

\* Available only for the SGPW.

## Input setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Decimal point place	0.000	0.000	
Output 0% value	0.000	0.000	
Output 100% value	0.000	0.000	
Indication unit	0.000	0.000	
Save settings	SAVE	YES	

## Output 1 setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output 1 type	0.000	0.000	
Output 1 decimal point place	0.000	0.000	
Indication value at output 0%	0.000	0.000	
Indication value at output 100%	0.000	0.000	
Output 1 low limit	0.000	0.000	
Output 1 high limit	0.000	0.000	
Output 1 Normal/Reverse	0.000	0.000	
Save settings	SAVE	YES	

### Output 2 setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Output 2 type	0552	420A	
Output 2 decimal point place	0000	0000	
Indication value at output 0%	0552	0400	
Indication value at output 100%	0552	2000	
Output 2 low limit	0000	0000	
Output 2 high limit	0000	0000	
Output 2 Normal/Reverse	0000	0000	
Save settings	SAVE	YES	

### Instrument setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Filter time constant	0000	0000	
Sensor correction	0000	0000	
Indication time	0000	0000	
Auto/Manual	MANU	MANU	
Manual mode auto return time	0000	0000	
Save settings	SAVE	YES	

### Communication setting mode (for SGPL)

Setting Item	Multi-Display A	Multi-Display B	Data
Instrument number	0000	0000	
Communication speed	0000	0000	
Data bit/Parity	0000	0000	
Stop bit	0000	0000	
Response delay time	0000	0000	
Save settings	SAVE	YES	

### Potentiometer adjustment mode

Setting Item	Multi-Display A	Multi-Display B	Data
Potentiometer input zero adjustment	0000	0000	
Potentiometer input span adjustment	0000	0000	

### Custom display setting mode

Setting Item	Multi-Display A	Multi-Display B	Data
Multi-Display A	0000	0000	
Multi-Display B	0000	0000	
Save settings	SAVE	YES	





\*\*\*\*\* Inquiries \*\*\*\*\*

For any inquiries about this unit, please contact our agency or the vendor where you purchased the unit after checking the following.

[Example]

- Model ----- SGP-A01-0-0
- Serial number ----- 154F05000

In addition to the above, please let us know the details of the malfunction, or discrepancy, and the operating conditions.

**SHINKO TECHNOS CO., LTD.**  
**OVERSEAS DIVISION**

Head Office: 2-5-1, Senbahigashi, Minoo, Osaka, Japan

URL: <http://www.shinko-technos.co.jp/e/>

E-mail: [overseas@shinko-technos.co.jp](mailto:overseas@shinko-technos.co.jp)

Tel : +81-72-727-6100

Fax: +81-72-727-7006